

FOCAL/RENAULT

INSTALLATION OF LIVE / PREMIUM KITS FOR RENAULT
Captur - July 2015



RECOMMENDATIONS BEFORE INSTALLATION

- Reset all car radio audio settings:
 - Ambience = Natural
 - Bass / Midrange / Treble settings = 0
 - Loudness = OFF
 - Fader and Balance = Centred
- The speaker drivers require a break-in period (approximately 20 hours) before they reach optimal sound quality.
After this break-in period, you can fine-tune the audio settings as you please.

I. ASSEMBLING THE FRONT SPEAKER DRIVERS

1. Equipment required for assembling the woofer.

Connector

Crossover

Spacer



I. ASSEMBLING THE FRONT SPEAKER DRIVERS

2. Connections

Note:

the crossover (with the black shielding) can be mounted any way around.



Speaker driver

Crossover



Fasten the crossover in place using a cable tie.

Note:

the cable tie mustn't come into contact with the spider (yellow part) when the speaker driver is in motion.

II. INSTALLING THE FRONT SPEAKER DRIVERS

The picture below shows the location of the screws to remove.



1. Unclip the door panels using prying tools.



II. INSTALLING THE FRONT SPEAKER DRIVERS

2. Remove the original speaker driver.



3. Connect your Focal speaker driver and screw in place.



III. ASSEMBLING THE TWEETERS


3. Slot the tweeter into the spacer making sure it's the right way up.

Note:
slot the wires into the same side the 2 tabs are fixed to.



4. Connect at position 2

Note:
position 1 is not used in this set-up.

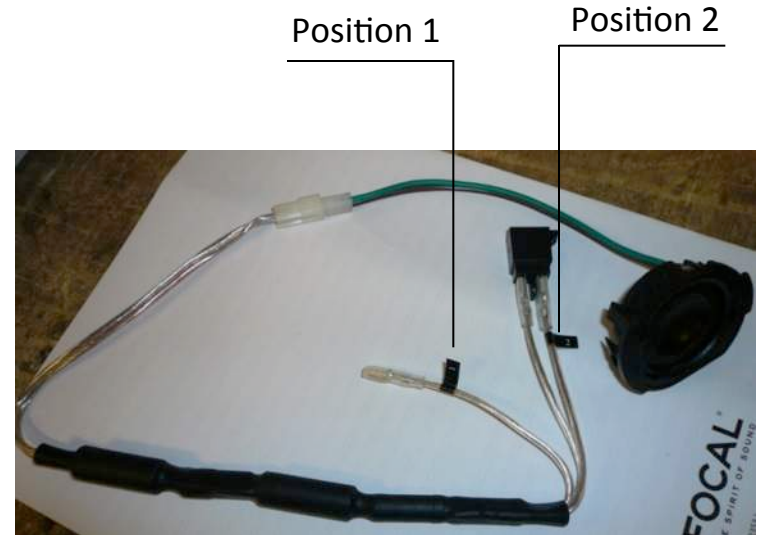

IV. INSTALLING THE TWEETERS

1. Remove the tweeter grille
(from inside to outside).



2.a. If there is no original tweeter,
remove the plastic cover and go to the next slide (10).



2.b. If there's already an original tweeter, remove it
(by simply unclipping it) and go to slide 13.

IV. INSTALLING THE TWEETERS

Installing the tweeter connector

If there isn't already an original tweeter cable, install the connector supplied:

1. Remove the head unit.




2. Install the connector.



White wire (left)
Grey wire (right)

IV. INSTALLING THE TWEETERS

3. Hook up the connectors to the head unit.

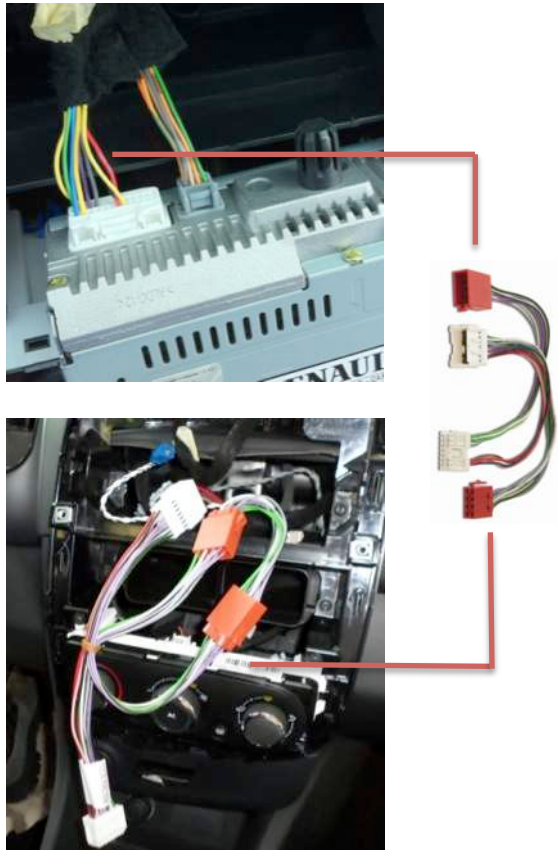


IV. INSTALLING THE TWEETERS

4. On the driver side:
remove the 2 screws from the
dashboard instrument cluster and
unclip it. You will then need to use
a cable grommet.



5. On the passenger side:
remove the glove box to install the tweeter connector
on the right hand side.

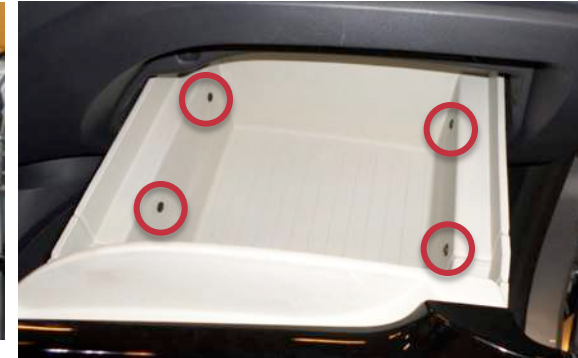

IV. INSTALLING THE TWEETERS

6. Connect the tweeter.



7. Insert the crossover into the housing by tilting it as shown in the photo.



8. Clip the tweeter into its housing.



9. Stick the logo included with the kit onto the grille.



V. ASSEMBLING THE REAR SPEAKER DRIVERS

The speaker driver settings have already been configured for this vehicle.



VI. INSTALLING THE REAR SPEAKER DRIVERS

The picture below shows the location of the screws to remove.



1. Unclip the door panels using prying tools.



VI. INSTALLING THE REAR SPEAKER DRIVERS

2. Remove the original speaker driver.




3. Connect your Focal speaker driver and screw in place.
Tilt the rotating tweeter upwards.



VII. PREPARING THE SUBWOOFER

Equipment required for installing the subwoofer:

Ground cable

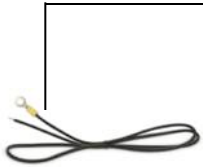

Power cable



Crimp sleeve



Power connector



Subwoofer cable with remote control



Adapter



Ibus 2.1



Extension cable




Head unit – subwoofer interconnect cable



Hook-and-loop fasteners (e.g. Velcro)




Connectors

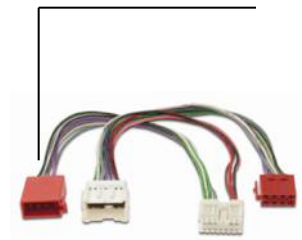


VII. PREPARING THE SUBWOOFER

1. Glue the two strips of hook-and-loop fasteners as shown.


Note:
be careful not to cover up the serial number

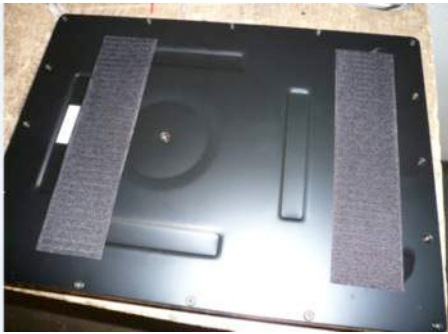


2. Connect the extension cable to the head unit - subwoofer interconnect cable.

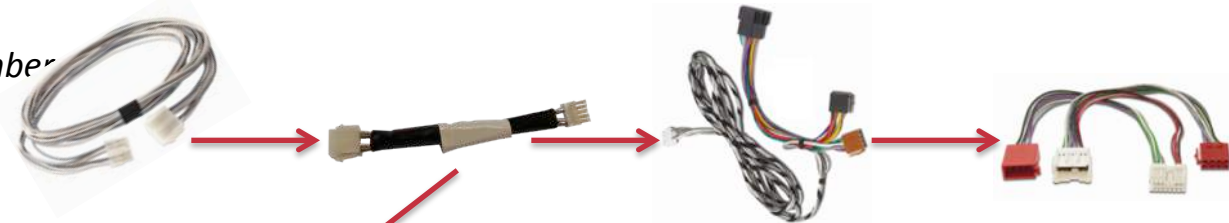


Note:
the adapter can only be used on an original head unit

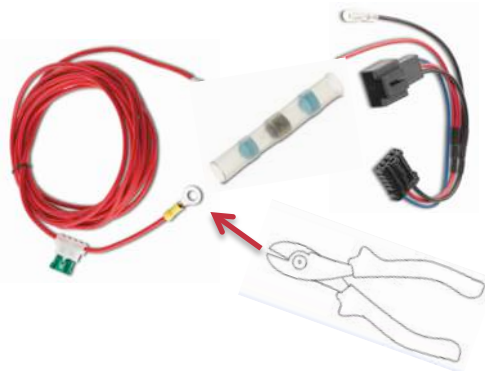

3. Cut off the terminal and splice.

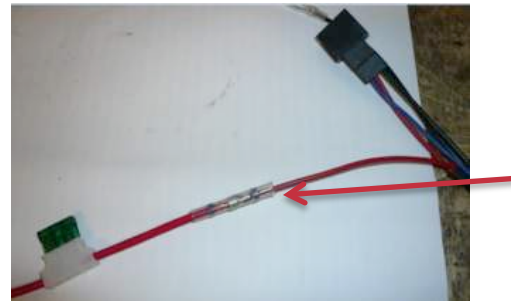

VIII. POSITIONING AND ADJUSTING THE SUBWOOFER

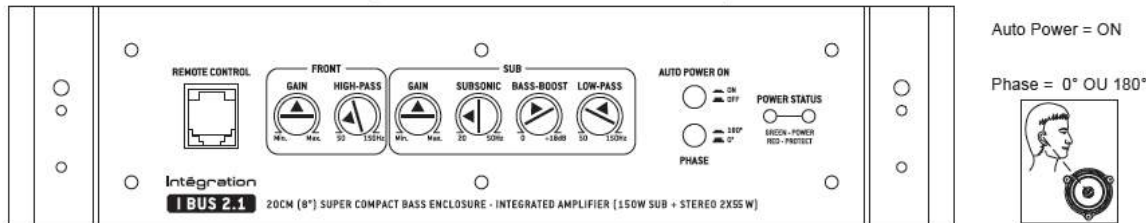

Phase: 0 or 180, this depends on many parameters, so it is advisable to try both positions without altering any other settings, and then to choose the one which sounds best.

IX. INSTALLING THE SUBWOOFER




1. Run the power connector + interconnect cable + remote control cable from the subwoofer to the head unit.



2. To gain access to the connectors, you need to unclip the left side of the console.


3. Connect the power connector to the 12V power socket.

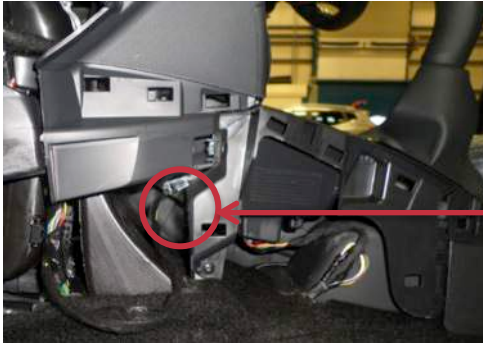

IX. INSTALLING THE SUBWOOFER

a. Vehicles equipped with Media Nav


Remove the head unit and connect to the connectors.

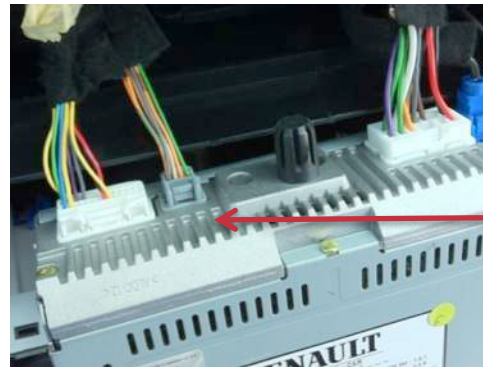




b. Vehicles equipped with **RLink**

IX. INSTALLING THE SUBWOOFER

There's no need to remove the screen with this version; the connectors are located behind the glove box.

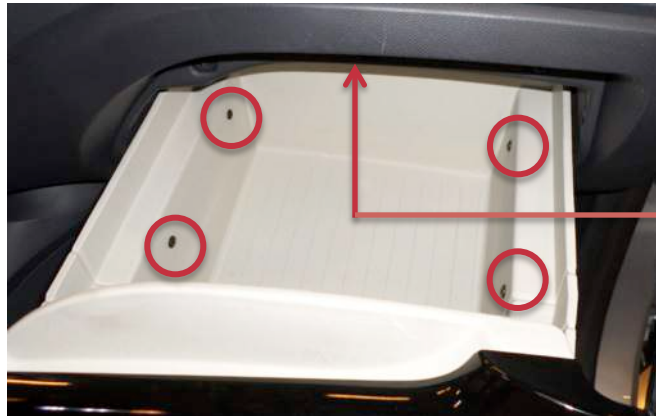

Remove the glove box to gain access to the head unit.

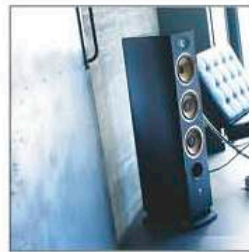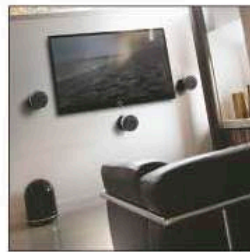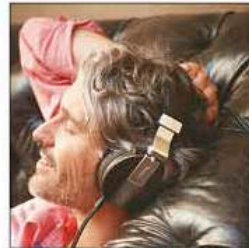






www.focal.com

FOCAL® is a trademark of FOCAL-JMLAB®     