

# FOCAL/RENAULT

INSTALLATION OF LIVE / PREMIUM KITS FOR RENAULT  
Megane III (except cabriolet)- [July 2015](#)



# RECOMMENDATIONS BEFORE INSTALLATION

---

- Reset all car radio audio settings:
  - Ambience = Natural
  - Bass / Midrange / Treble settings = 0
  - Loudness = OFF
  - Fader and Balance = Centred
- The speaker drivers require a break-in period (approximately 20 hours) before they reach optimal sound quality.  
After this break-in period, you can fine-tune the audio settings as you please.

# I. ASSEMBLING THE FRONT SPEAKER DRIVERS

## 1. Equipment required for assembling the woofer.

Spacer



Crossover



Rivet



Connector



## 2. Connections

Note:

*the crossover (with the black shielding) can be mounted any way around.*



Speaker driver and removable clips



Crossover

# I. ASSEMBLING THE FRONT SPEAKER DRIVERS

## 3. Assemble the speaker driver with the spacer

Note:

*It is recommended to glue the crossover on the woofer*



## 4. Screw the speaker driver into its support

Note:

*Run the cable in the adequate notch*



## II. INSTALLING THE FRONT SPEAKER DRIVERS

The picture below shows the location of the screws to remove.



1. Unclip the door panels using prying tools.



## II. INSTALLING THE FRONT SPEAKER DRIVERS



**2. Screw the rivets**  
to remove the  
speaker driver



**3. Use some adhesive  
tape** behind the rivets to  
ensure they don't fall into  
the car door and remove  
them



**4. Fix the speaker driver**  
using the supplied rivets  
and a large crimping tool




**5. Connect  
the speaker driver**

Note:


*Rivets are large but smooth to avoid any vibrations of the  
speaker drivers*

### III. ASSEMBLING THE TWEETERS


1. Equipment required for assembling the tweeter.

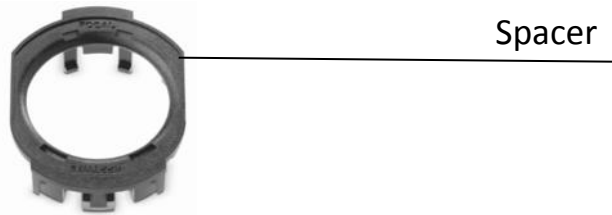

Spacer

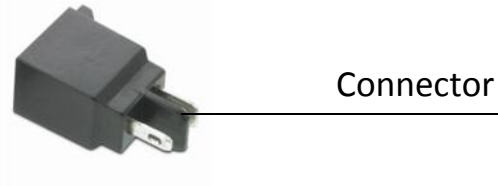

Connector

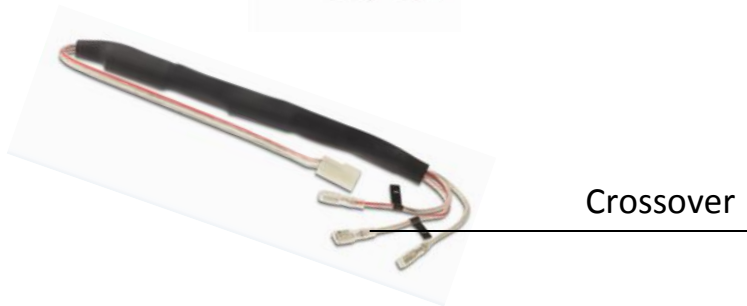

Crossover

2. Remove the grille by simply unclipping it.





# III. ASSEMBLING THE TWEETERS

## 3. Slot the tweeter into the spacer making sure it's the right way up.

Note:


*Slot the wires into the same side the 2 tabs are fixed to.*



## 4. Connect at position 2

Note:

*position 1 is not used in this set-up.*

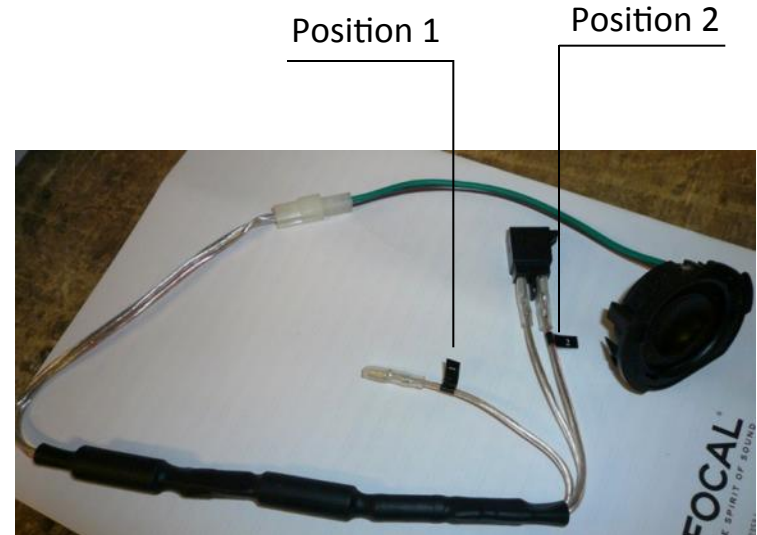



## IV. INSTALLING THE TWEETERS



**1. Remove the tweeter grille**  
(from inside to outside)



**2.a.** If there's an original tweeter, remove it  
(by simply unclipping it)



**2.b.** If there is no original tweeter,  
remove the pre-cut part with a  
screwdriver, and remove the support  
to free the connector


## IV. INSTALLING THE TWEETERS



**3. Connect the tweeter**



**4. Insert the crossover into compartment tilting it forward**



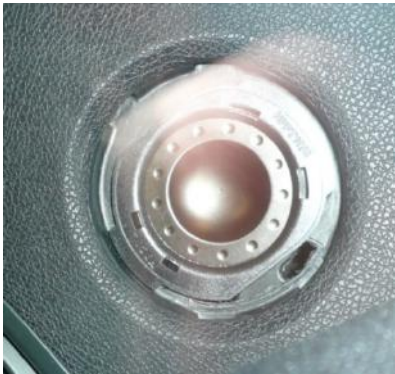


**5. Clips the tweeter into its compartment**



**6. Stick the supplied logo on the grille**

# V. ASSEMBLING THE REAR SPEAKER DRIVERS

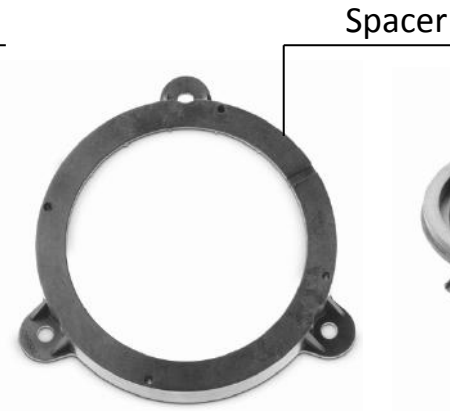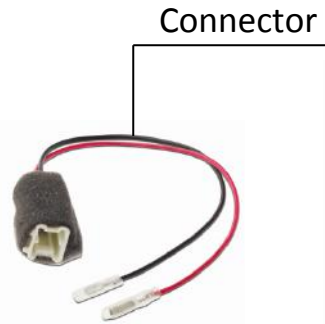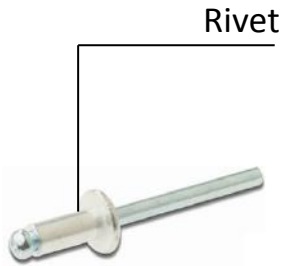

Assemble the rear speaker driver on its support



## VI. INSTALLING THE REAR SPEAKER DRIVERS

### a. Mégane III coupé

1. To access the rear speaker driver platine: remove the seat and filp the backrest forward

2. Remove the superior door trim

3. Remove the screw

4. Remove partially the door trim





## VI. INSTALLING THE REAR SPEAKER DRIVERS

### a. Mégane III coupé



**2. Remove the support from its compartment**



**3. Screw the rivets to remove the speaker driver**



**4. Rivet on the support and fix it in the car, the tweeter is rotary and has to be oriented upwards**

Before reinstalling the right side panel, run the subwoofer connector





## VI. INSTALLING THE REAR SPEAKER DRIVERS

### b. Mégane III Berline and Estate

The picture below shows the location of the screws to remove.



1. Unclip the door panels using prying tools.



## VI. INSTALLING THE REAR SPEAKER DRIVERS



**2. Screw the rivets**  
to remove the  
speaker driver



**3. Use some adhesive  
tape** behind the rivets to  
ensure they don't fall into  
the car door and remove  
them



**4. Fix the speaker driver**  
using the supplied rivets  
and a large crimping tool



**5. Connect  
the speaker driver,** the  
tweeter is rotary and has  
to be oriented upwards

Note:


*Rivets are large but smooth to avoid any vibrations of the speaker drivers.*



# VII. PREPARING THE SUBWOOFER

Equipment required for installing the subwoofer:

Ground cable

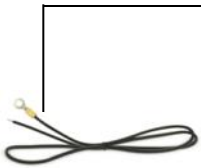

Power cable



Crimp sleeve




Power connector



Subwoofer cable with remote control



Adapter

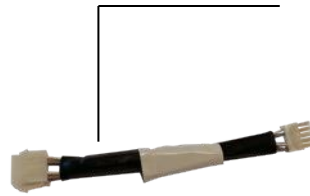

Ibus 2.1



Extension cable




Head unit – subwoofer interconnect cable




Hook-and-loop fasteners (e.g. Velcro)



Mégane III PH2 connectors

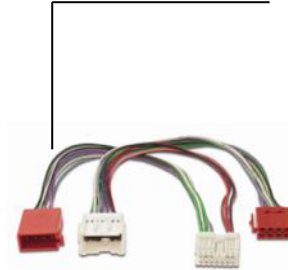


Mégane III PH1 connectors

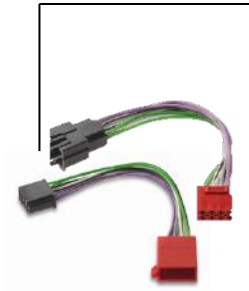


# VII. PREPARING THE SUBWOOFER

1. Glue the two strips of hook-and-loop fasteners as shown.


Note:  
*be careful not to cover up the serial number.*

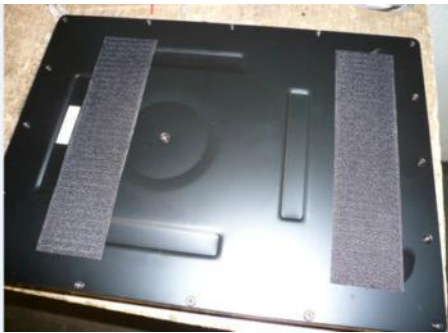


2. Connect the extension cable to the head unit - subwoofer interconnect cable.

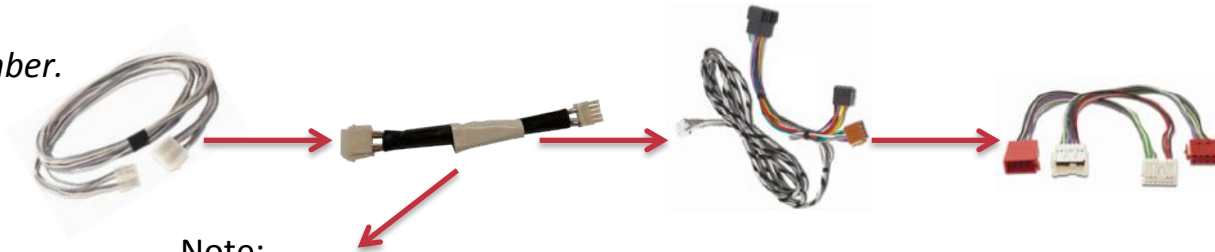

Note:  
*the adapter can only be used on an original head unit*

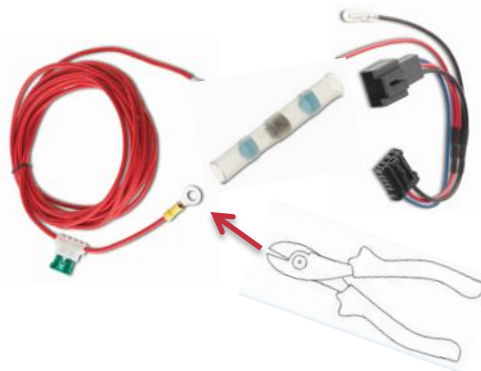

3. Cut off the terminal and splice.

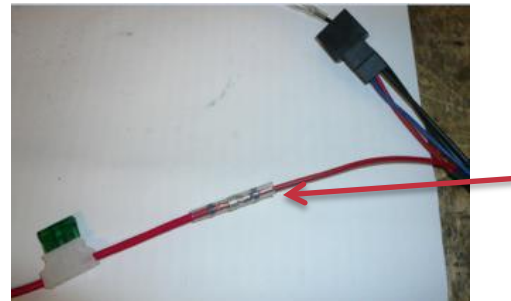

# VIII. INSTALLING THE SUBWOOFER



Mégane III coupé




Berline



Estate

The ground cable has to be connected to the ground connector located near the rear light

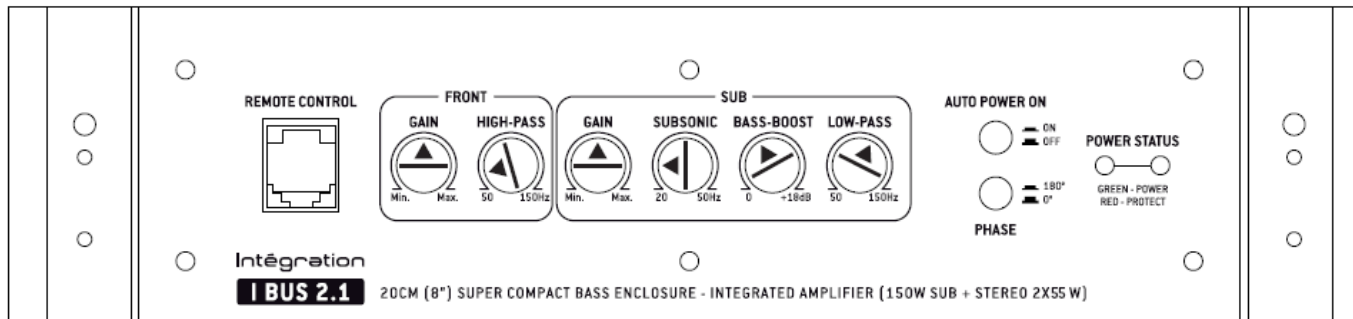

Auto Power = ON  
Phase = 0°

## VIII. INSTALLING THE SUBWOOFER

**1. Run the power connector + interconnect cable + remote control cable from the subwoofer to the head unit.**



**2. Remove the glove box to run the connector to the head unit**



## VIII. INSTALLING THE SUBWOOFER

**3. Remove the superior venting grid for a better head unit connector accessibility**



**4. Connect the power connector to the 12V power socket.**



# VIII. INSTALLING THE SUBWOOFER

## 5. Remove the head unit and connect to the connectors

PH1



PH2












[www.focal.com](http://www.focal.com)

FOCAL® is a trademark of FOCAL-JMLAB®     